

User's Guide

EDISION®

**piccolo 3in1
plus ci**

High Definition Receiver



DVB T2® DVB S2® DVB C®



www.edision.gr

CONTENTS

1.	SAFETY	3
2.	INTRODUCTION	3
3.	FEATURES.....	4
4.	REMOTE CONTROL	5
5.	FRONT PANEL	6
6.	REAR PANEL	6
7.	CONNECTING YOUR SYSTEM	6
7.1	TV WITH MOTORIZED SYSTEM (DiSEqC 1.2)	7
7.2	CONNECTING THE NETWORK.....	7
8.	BASIC OPERATIONS	9
8.1	TURN ON STB.....	9
8.2	POWER.....	9
8.3	CHANNEL UP/CHANNEL DOWN	9
8.4	LEFT/RIGHT	9
8.5	NUMBER	9
8.6	MUTE	9
8.7	PAUSE.....	9
8.8	RECALL	9
8.9	FAVORITE	9
8.10	AUDIO.....	10
8.11	INFORMATION	10
8.12	EPG	10
8.13	TV/RADIO.....	11
8.14	CHANNEL LIST	11
8.15	SLEEP.....	12
8.16	PAGE UP/PAGE DOWN	12
8.17	TEXT	12
8.18	SUBTITLE	12
8.19	FIND.....	12
8.20	ZOOM.....	12
8.21	MENU.....	12
8.22	VIDEO FORMAT	13
8.23	EXIT	13
9.	SERVICE	13
9.1	ORGANIZING SERVICE	13
9.2	ORGANIZING FAVOURITES.....	15
10.	INSTALLATION	15
10.1	SATELLITE INSTALLATION	15
10.2	FASTSCAN SATELLITE	17
10.3	AUTO INSTALLATION	17
10.4	SATELLITE GUIDE	17
10.5	TERRESTRIAL INSTALLATION.....	18
10.6	CABLE INSTALLATION	18
11.	SYSTEM	18
11.1	LANGUAGE	19
11.2	A/V CONTROL	19
11.3	ETHERNET SETTING	20
11.4	TIME SETTING	21
11.5	TIMER	21
11.6	PARENTAL CONTROL	22
11.7	MISCELLANEOUS SETTINGS	23

11.8	SOFTWARE UPGRADE.....	23
11.8.1	Upgrade By USB	23
11.8.2	Http Upgrade.....	23
11.8.3	Ftp Upgrade	24
11.8.4	Upgrade by RS232:.....	24
11.8.5	Backup to USB.....	24
11.8.6	Upgrade By Satellite:	24
11.9	DEFAULT SETTING	25
11.9.1	Default Value:.....	26
11.9.2	Delete All Channel:	26
11.9.3	Save default value.....	26
11.10	INFORMATION	26
12.	CONDITIONAL ACCESS	27
12.1	CA SETTING.....	27
12.2	COMMON INTERFACE.....	27
13.	APPLICATION	27
13.1	YOUTUBE	27
13.2	RSS READER.....	28
13.3	WEATHER FORECAST	29
13.4	GOOGLE MAPS.....	29
13.5	FTP.....	29
13.6	WEB TV.....	30
13.7	DLNA.....	30
13.8	BIG2SMALL.....	31
14.	GAME	32
14.1	TETRIS	32
14.2	SNAKE.....	32
14.3	OTHELLO	32
15.	EPG.....	33
16.	NEW FEATURES	33
16.1	EQUALIZER	33
17.	TROUBLE SHOOTING.....	34
18.	SPECIFICATIONS.....	35



Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are trademarks of Dolby Laboratories.

1. SAFETY

This HD Receiver has been manufactured to satisfy the international safety standards. Please read the following safety precautions carefully.

MAINS SUPPLY: 100 - 240V AC 50/60Hz

OVERLOADING: Do not overload wall outlet, extension cord or adapter as this may result in fire or electric shock.

LIQUIDS: Keep liquids away from the HD Receiver. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

CLEANING: Disconnect the HD Receiver from the wall outlet before cleaning .Use a light damp cloth (no solvents) to dust the HD Receiver.

VENTILATION: The slots on top of the HD Receiver must be left uncovered to allow proper airflow to the unit. Do not stand the HD Receiver on soft furnishings or carpets. Do not expose the HD Receiver to direct sunlight or do not place it near a heater. Do not stack electronic equipments on top of the HD Receiver.

ATTACHMENTS: Do not use any attachments that are not recommended as these may cause hazard or damage the HD Receiver.

CONNECTION TO THE SATELLITE DISH LNB: Disconnect the HD Receiver from the mains before connecting or disconnecting the cable from the satellite dish.

FAILURE TO DO SO CAN DAMAGE THE LNB.

CONNECTION TO THE TV: Disconnect the HD Receiver from the mains before connecting or disconnecting the cable from the satellite dish.
FAILURE TO DO SO CAN DAMAGE THE TV.

EARTHING: The LNB cable MUST BE EARTHED to the system earth for the satellite dish.

LOCATION: Place the HD Receiver indoor in order not to expose to lightening, rain or sunlight.

2. INTRODUCTION

Thank you for purchasing the HD Receiver.

This HD Receiver is fully compliant with the international DVB standard and thus transmits digital images, sounds, information guides and teletext directly to your TV through the satellite broadcasting.

Now you can comfortably see and receive digitally transmitted music, news, movie and sports satellite broadcasts in your office or at your home. You can enjoy interesting games embedded in HD Receiver.

 
In service search section, both the automatic service search method and the manual search mode are provided. Also it supports DiSEqC 1.0, 1.2 and USALS, enabling you to move your antenna in order to focus preferred satellite. You can save up to 6000 TV and Radio services and work around with the favorite, Lock, Delete, Move and Sort functions. The menu is very modern and supports multiple languages. All functions can be carried out using the remote control and some of the functions can also be carried out using the front panel. The HD Receiver is easy to use and adaptable for future advances. Please be aware that new software may change the functions of the HD Receiver.

If you have any difficulties concerning the operation of your HD Receiver, please refer to the relevant section of this manual, including the 'Troubleshooting'. This Manual will provide you with useful information on using the HD Receiver.

3. FEATURES

- MPEG-Fully DVB-S2, DVB-T/C and DVB-T2 (H.264) HD compliant
- 6000 channels (TV and Radio) programmable
- Multilingual menu text support
- Channel switching time less than 1 second
- Channel list editing
- Favorite channel list editing
- True-color On-Screen Display (OSD)
- Full Picture In Graphic (PIG) function
- Electronic Program Guide (EPG) for on screen channel information
- Subtitle supported
- Teletext supported by VBI insertion and software emulation
- Parental lock facility by channel and program event
- Program and Channel information transfer from receiver to receiver
- Exciting games embedded
- Dolby Digital Bit-Stream output via HDMI
- DiSEqC 1.0, 1.1, 1.2 ,USALS and Unicable
- HDMI Full HD (1080p) Video/Audio Output
- 2x USB 2.0 Host
- 4 Digit LED Display for service information (optional)
- RTC (Real-Time-Clock)
- 3G Network Function Supported

4. Remote Control

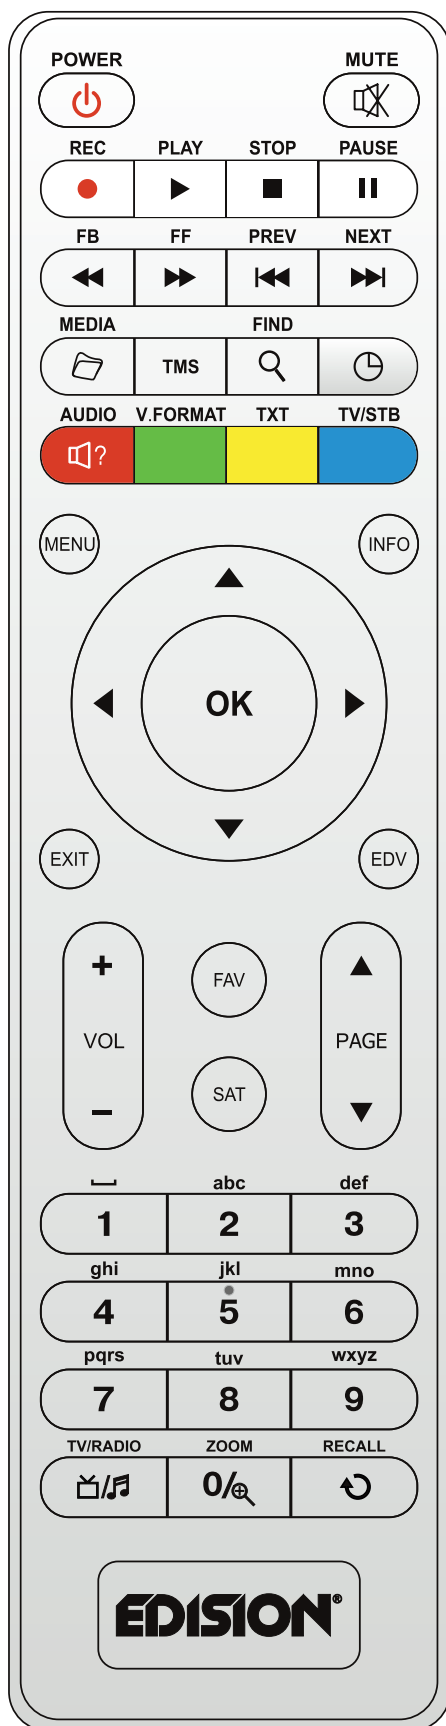

You can power on/off the receiver, operate on screen menu, and use a variety of hot key function.

POWER

To switch your receiver on from standby or standby to on.

MUTE

Used to enable or disable the audio

NUMERIC KEYS

Used to select channels or enter programming parameters

(TV / RADIO)

Receiver switches between TV and Radio mode.

(ZOOM)

Press key select zoom times, from X1 to X16.

RECALL

Return to the previous menu or status.

TV/SAT

Receiver switches between TV and receive mode.

(INFORMATION)

To display channel status or various program information of current service.

EDV = EPG (Electronic Program Guide)

Display the Programs guide on screen when available.

MENU

Displays the Main Menu on the screen, or return to the previous menu or status.

EXIT

Cancel the user selection and return to the viewing mode from a menu.

OK

To select menu option, or to update on entry.

<,> KEY

To adjust volume level, or to move cursor left or right in the menu.

^, v KEY

To change channels, or to move cursor up or down in the menu.

Page^/Page v

To move up the cursor to the next or previous page in the menu or channel list.

TXT = Teletext / Subtitle

Shows teletext information of the current channel supports / Subtitle Display

UHF

In case your TV is connected through RF Modulator (UHF), select output channel number between CH21 and CH69 with up and down key.

(FIND)

Use to prompt find channels sort by character.

TIMER

Press timer key you can setup up the Standby time.

V. FORMAT

Press P/N button to switch the display mode among "By source", "By native TV", "480i", "480P", "576i", "576p", "720P" and "1080i".

FAV (FAVORITE)

To set receiver to the favorite server mode, Display the favorite channel.

AUDIO (Red Key)

Audio channels setup, to select audio mode; Left, Right, Stereo, Mono.

OPTION (GREEN KEY)

Shows NVOD information of the current channel supports.

SAT

Display the satellite list at normal picture.

5. Front panel

POWER KEY: To switch the receiver power on/stand by

MENU KEY: Displays the Main Menu on the screen, or return to the previous menu or status.

EXIT KEY: Cancel the user selection and return to the viewing mode from a menu.

V-/V+ KEY: To adjust volume level, or to move cursor left or right in the menu.

P-/P+ KEY: To change channels, or to move cursor up or down in the menu

OK KEY: To see TV/Radio channel list, or to confirm in the menu.

Remote Sensor: Detects infrared signal from remote control unit

 
Display: (LED type) Indicates operating status of receiver

POWER Indicator: while the receiver is power on and at standby mode.


Card Slot: One slot CA Interface for Conax. Insert the smart card chip side up!

Common Interface: One socket for Conditional Access Modules CAM.

USB: USB 2.0 Host, connect to USB hard disk, or flash disk and 3G dongles.

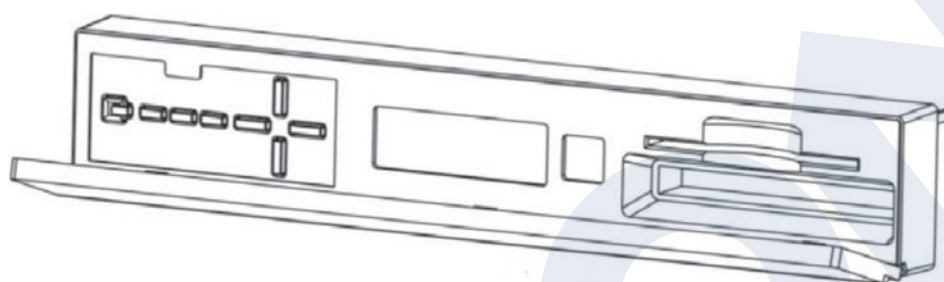

 6. Rear Panel

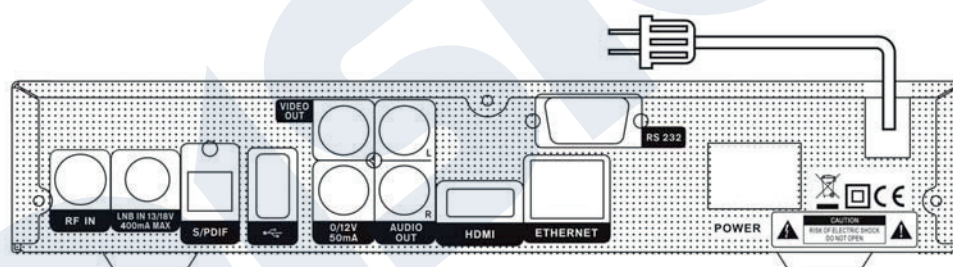

Please refer to the diagram above for all possible connections of your receiver

Do not connect the unit to the mains socket until all other connections have been made and checked.

POWER ON/OFF SWITCH: To switch ON/OFF the receiver power supply.

LNB IN 13/18V 400mA MAX: This port is to connect the coaxial cable from LNB of your Dish.

RF IN: This port is to connect the coaxial cable from Terrestrial/Cable Antenna.

VIDEO OUT: This RCA connector is used to connect any external video.

AUDIO R/L: These RCA connectors are used to connect any external audio amp or system.

0/12V 50mA: This is used to connect 12V to an external 0V/12V switch.

S/PDIF: Digital Audio interface, connect to AV amplifier S/PDIF input terminal.

HDMI: Audio and Video output socket for TV set with HDMI Input Jack only.

RS 232C SERIAL PORT: This is used to connect your receiver to a computer through a serial cable.

 
USB: USB 2.0 Host, connect to USB hard disk, or flash disk. And 3G dongles

Ethernet: Network port, you can get a new software updates from this port.

7. Connecting Your System

There are two ways to connect the receiver to your existing TV system. We recommend using one of the following cases for the best result:

1. If you have a high definition television set, you should use a HDMI cable for best result, Plug one end of the cable into the HDMI socket on the receiver, and the other end into the matching socket on your television. In this case, you do not have to make audio connections because the HDMI connector can output stereo audio or Dolby Digital audio.
2. Connect one end of RCA cable to the RCA jack on the back of the receiver and the other end to a RCA jack on your TV.

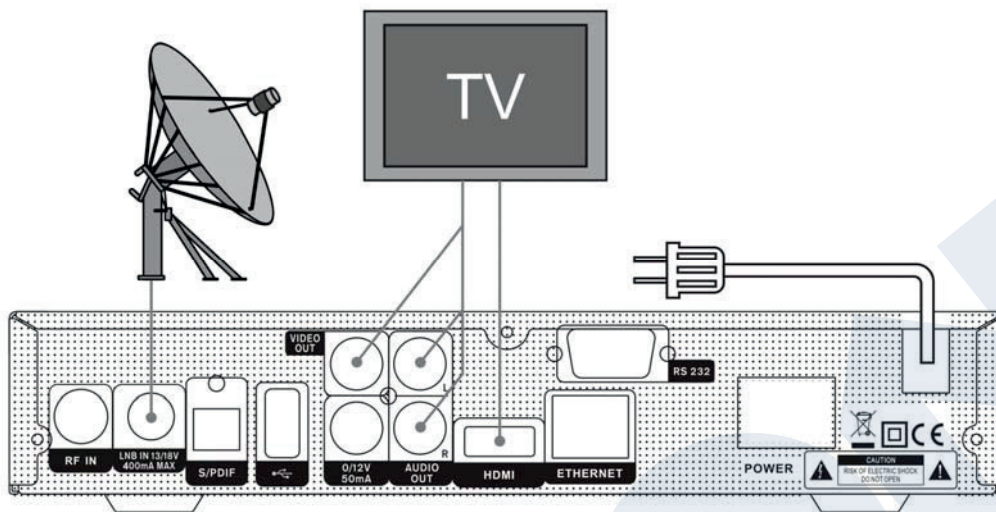

Finally connect the coaxial cable from the LNB of your Dish to the LNB IN jack on the receiver.

With External Audio / Hi-Fi System

To connect any external Audio Hi-Fi system, the receiver has been provided with RCA connector at the back of the receiver marked with AV OUT.

Connect an RCA cable from the AV OUT jack on the back of the receiver to the LINE, AUX, SPARE OR EXTRA input jacks on your Hi-Fi System.

7.1 TV with Motorized System (DiSEqC 1.2)

Connect one end of your coaxial cable to the LNB IN connector on the receiver and the other end to the REC or Receiver connector on the DiSEqC 1.2 motor.

Connect the coaxial cable from the LNB to the LNB connector on the DiSEqC 1.2 motor.

All our receivers are designed to be DiSEqC 1.0 and DiSEqC 1.2 compatible.

This allows multiple antennas to be connected to the receiver at the same time.

If you have two or more fixed antennas or LNBs, then we recommend you use a DiSEqC 1.0 Switch.

Connect the coaxial cable from the first LNB to the LNB 1 or LNB A input connector of the DiSEqC switch.

Do the same for any other LNBs that you have.

Connect one end of a coaxial cable to the RF output connector of the DiSEqC switch,

Connect the other end to the LNB IN socket on the receiver.

To the digital receiver, you can connect either a single satellite antenna directly or LNB of Multi-feed equipment.

7.2 Connecting the Network

1. Connecting to the LAN:

Connect one end of the Ethernet cable to the product and the other end to the LAN router.

2. Connecting to the Wi-Fi (Wireless LAN):

You can connect the network via the Wi-Fi access point or DSL/cable modem.

- a. Plug in the wireless USB dongle to the USB port.(Separate purchase required)

b. Set the options for the Wi-Fi.

- **Network Name (SSID):** Select the network name of your Wi-Fi access point from the list.
- **Security Type (WEP):** This product supports WEP 40/128bit ASCII and WEP 40/128bit HEX. The security type of the Wi-Fi and the product shall be set the same.
- **Password:** When using the security type, you must set the password. Enter the same password in the Wi-Fi setting menu.

3. Connecting to the 3G:

Connect the network via the 3G dongle. Plug in the USB that has 3G dongle.

Note:

- 1 *Make sure the distance between the Wi-Fi access point and the product is not too far away. This may lower the quality of service.*
- 2 *It is recommended to purchase a wireless USB dongle distributed by RT5370. Other Products may not function or respond.*
- 3 *It is recommended to purchase a 3G USB dongle distributed by Huawei E1750 , E1550 , E1752, E173 Other products may not function or respond.*
- 4 *We recommend the network connection over a direct LAN.*

8. Basic Operations

8.1 Turn on STB

First, connect to an external 12V adapter to turn on the unit.

When the STB is first used, there will play the first channel from the default Channel List. If the STB is not first used, STB will play the same channel as last time before turning off.

? Frequently Asked Question

Q: the power of my STB has been turned on and not in Standby mode, but the TV screen showed nothing:

A: Make sure the TV set has been set to the correct video input (not the TV channels). For example, if you have connected the unit with the Video1 input of the TV set, the TV set has to be switched to Video1.

Q: the power of my STB has been turn on and not in Standby mode, but the TV screen showed nothing except one box with "No Signal" image.

A: That means the channel, which you select, is no signal. It could be several causes:

- 1 The channel which you select is not in your allocate satellite. The simply solution is to change channel.
- 2 The signal of current TV channel is too weak. You can try to change channel to other strong signal channels. If the problems still exist, please consult your local dealer or other professionals for technical service.
- 3 You use the Dual LNB, and you need Modify LNB Type

8.2 Power

- 1 Press [Power] Key can enter the Standby state
- 2 In Standby state, press [Power] Key again can call back the unit and go on play the previous channel
- 3 User can also disconnect the device's main power to end the Standby state.

8.3 Channel Up/Channel Down

In full screen, press [CH+/CH-] to change channel.

8.4 Left/Right

In full screen, press [Left/Right] to adjust volume.

8.5 Number

In full screen, use number key and press [OK] on the Remote Control Unit to change channel.

8.6 Mute

- 1 Press [MUTE] key to mute the sound and the screen will show up mute OSD.
- 2 Press [MUTE] key again to restore sound.

8.7 Pause

- 1 In playing mode, press [Pause] key, the picture will be paused, but the sound of the channel will still continues.
- 2 Press [PLAY] key again, the screen's picture will skip over to the current playing picture, and the sound of the channel will correspond playing.

8.8 Recall

Press [RETURN] key will directly switch to the previous channel that you played before current channel.

8.9 Favorite

- 1 In full screen, press [FAV] key, it will display a window of "Favorite list" on the left of the screen, which you can watch like below.



- 2 In the window of "Favorite list", you can move highlight by press [Channel Up/Channel Down] key to select favorite Channels.
- 3 In the window of "Favorite list", you can press [Left/Right] key to select favorite groups Pressing [P-/P+] keys can implement the "Page up/Page down" function



- 4 Press [Exit] key to exit the current window.

? Frequently Asked Question

Q: Why the screen displays “No Favorite Channel”, after pressing [Favorite] key?

A: It is because that you haven't set any channels as “favorite channel”. Please refer to Favorite function.

8.10 Audio

- 1 In full screen, press [AUDIO] key can open the “Audio” window on the screen.



- 2 You can modify the audio track by press [Channel Up / Channel Down] key and modify the audio mode by press [left/right] key.
- 3 Mode: Left/Right/Stereo/Mono

 
8.11 Information

In full screen, press [INFO] key (press [INFO] key and [RED] key) can open information screen, in the window shows the parameters of current channel.





8.12 EPG

- 1 The STB has an Electronic Program Guide (EPG) to help you navigate channels through all the possible viewing options. The EPG supplies information such as channel listings and starting and ending times for all available channels. Press [EPG] key to display EPG screen.

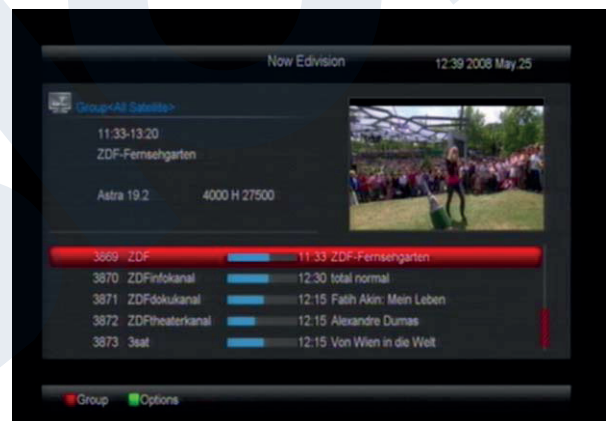

  - 2 Press [Red] key can select the channels by different group, such as by Favorite/Satellite/Provider/CAS etc.
- 3 Press [Green] key to select different display mode among Now EPG, Next EPG, More and Schedule, like the following picture:

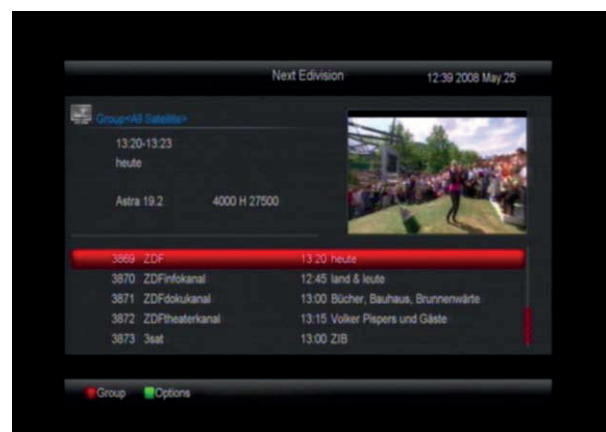

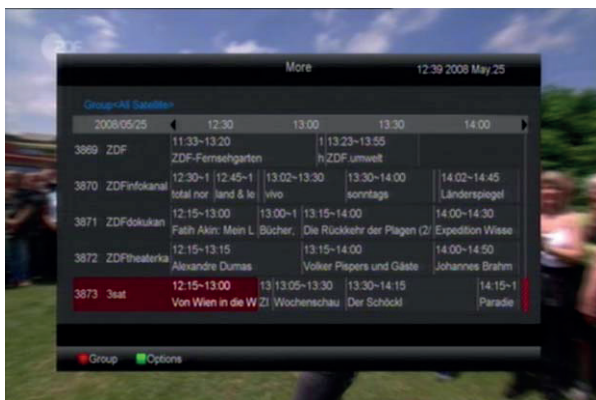


4 In EPG menu, press [Exit] to close EPG screen.

8.13 TV/RADIO

In TV mode, pressing [TV/RADIO] key can switch to Radio mode. In Radio mode, press [TV/RADIO] key to switch to TV mode.

8.14 Channel List

 1 In full screen, press [OK] key can enter "Channel List".

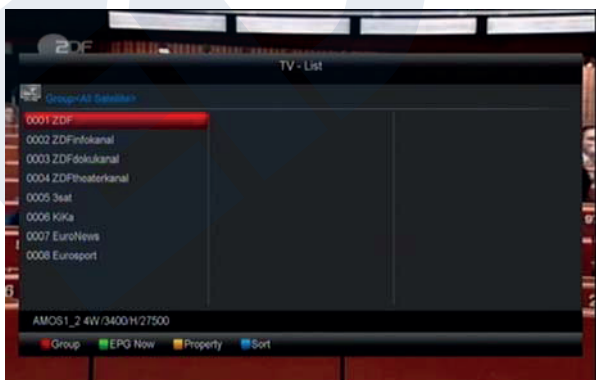

2 Press [Red] key to change the different group. Which you can watch like below.



 
3 Press [Green] key to display details information for EPG Now.



4 Press [Yellow] key you can change the current channel's property, such as FAV/ Lock/ Skip/ Delete/ Rename.



5 Press [Blue] key can open the "Sort" window likes below. There are five kinds of sorting ways. You can press [Channel Up/Channel Down] key to move highlight and press [OK] key to confirm you selection.

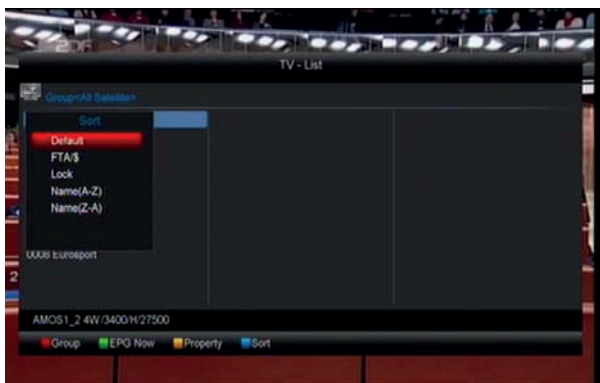

- 6 The five kinds of sorting way are:
 - ✧ Default: Sorting by scanning result.
 - ✧ FTA/\$: Sort channel through free and scramble sequence. Free channel will in the front of channel list and scramble channel will at the rear of channel list.
 - ✧ Lock: Accumulated all locked channels and list in the last of TV Channel List.
 - ✧ Name (A-Z): Sorting in Alphabetical Order, ignore "\$" symbol.
 - ✧ Name (Z-A): Sorting in Alphabetical Order, ignore "\$" Symbol.
- 7 Press [Up/Down] key to move highlight and press [OK] key to play the highlighted channel.
- 8 Press [Page Up/Down] key to page up and page down.
- 9 Press [Exit] key to exit the channel list.

8.15 Sleep

1. This function can set sleep timer. When you set a sleep timer and the time arrive, the system will enter to standby automatically.
2. Pressing [SLEEP] key, it will switch the mode between Sleep Timer Off /10/30/60/90/120 minutes.

8.16 Page Up/Page Down

In Channel list, press [Page+ /Page-] key can page up and page down the channel list.

8.17 TEXT

1. Press [green] key in full screen, you can open teletext page on the channel which has teletext information.
2. If the channel has no teletext information, it will show "No Teletext Data" on the screen.

8.18 Subtitle

- 1 Press [YELLOW] key in full screen you can select the subtitle language or off on the channel which has subtitle.
- 2 If you set the Auto subtitle option as ON in Miscellaneous settings menu, the subtitle will be showed automatically.

8.19 Find



- 1 Press [Find] key in full screen can open the "Find" window like above. You can press [Channel Up/Channel Down/Left/Right] key to move highlight and press [OK] key to input the selected symbol or letter into the dialogue.
- 2 After input each character, the program list on the left will search the channel according your input, and list the matched channel.
- 3 Move highlight to "OK" and press [OK] key can close "Find" window and you can select channel from the channels list directly.

8.20 Zoom

- 1 The [ZOOM] key allows you to magnify a certain area on the images
- 2 Press [ZOOM] key again, the image will enlarge rotate as x1, x2, x4, x6, x8, x12, x16.
- 3 In "x2 ~ x16" image, using [Up/ Down/ Up/ Down] keys to move the image center area you want to see.
- 4 In zoom mode, press [Exit] to close "Zoom" window.

8.21 Menu

Press [MENU] key can open the menu, exit the current menu to last menu or close the window.

8.22 Video Format

Press [V. FORMAT] key under Full Screen playback for 1st, it will show the current system outputting video resolution, continuously press this key, system will switch its outputting video resolution by sequence “by source-> by native TV -> 480i-> 480P-> 576i-> 576p-> 720P-> 1080i->1080p”.

 


8.23 Exit

Press [EXIT] key can exit the current menu to last menu or close the window.

9. Service


When you press [Menu] key to enter menu, there will display the picture like below:

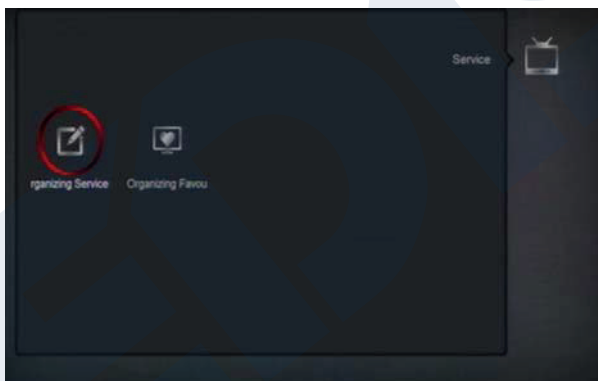

- ✧ Press [Up/Down] key you can select the submenu of organizing services and organizing favorites.
- ✧ Press [OK] key to enter the “Organizing Service”. If Menu Lock is “On”, it will display a dialogue for user to key in password. The default Password is “0000”.
- ✧ Press [Menu] key to go back to main menu.


9.1 Organizing Service

 When you enter to “Organizing Service” menu, there will display the screen like below.

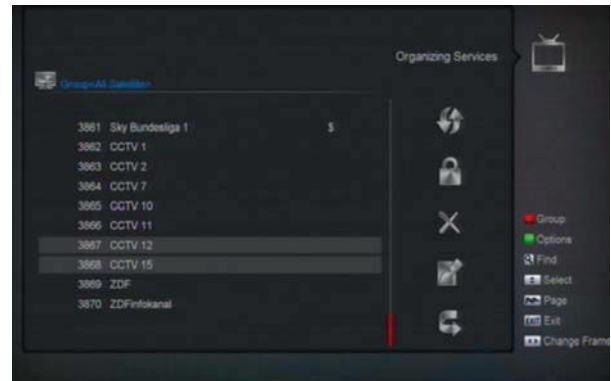


1. You can move highlight by press [Up/ down] key and [OK] key to select the programs which you want to edit.
2. You can press [Page Up/Page Down] key to implement the Page Up/Page down function.
3. You can use [Red] key to switch different Group.
4. You can press [Green] key to select the programs by different select mode.
5. Press color key can implement the corresponding function in “Organizing Services”.

 Groups

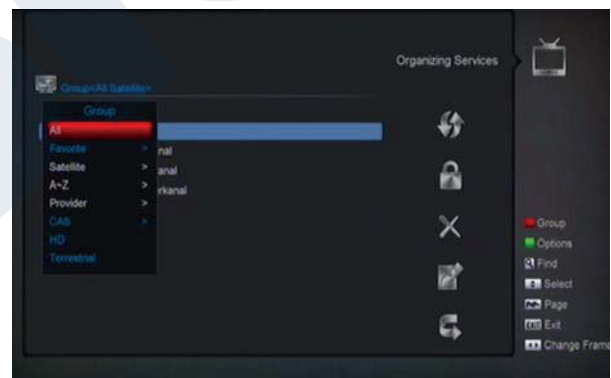

1. Press [Red] key can open the “Groups” window like above
2. You can press [Up/Down] key to move highlight and press [OK] key to select group.
3. Press [Menu] key to close “Groups” List.

 
Options

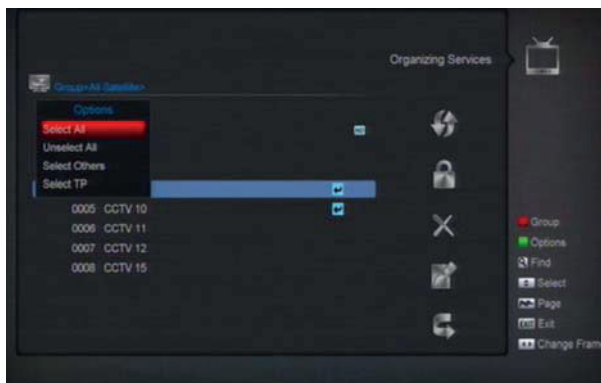

1. Press [Green] key can open the "Options" window likes above.
2. You can press [Up/Down] key to move highlight and press [OK] key to confirm the select mode.
3. Press [Menu] key to close "Options" List.

Move

 1. Select the channels which you want to edit in channel list by press [OK] key or other select mode.
2. Then press [Right] key to move the high light to right toolbar.
3. Select Move icon by press [Channel Up/Channel Down] key and [OK] key.
4. Move the channels to the position which you want and press [OK] key to confirm. Like the following picture:

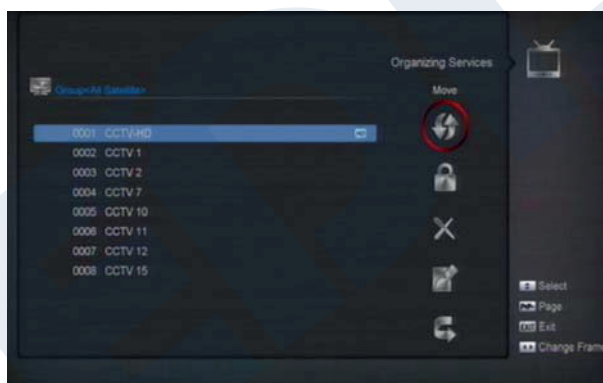

Lock

1. Select the channels which you want to edit in channel list by press [OK] key or other select mode.
 2. Then press [Right] key to move the high light to right toolbar.
 3. Select Lock icon by press [Channel Up/Channel Down] key and [OK] key.
 4. Lock the channel by press [OK] key.
- Like the following picture:



Delete

 
- a) Select the channels which you want to edit in channel list by press [OK] key or other select mode.
- b) Then press [Right] key to move the high light to right toolbar.
- c) Select Delete icon by press [Channel Up/Channel Down] key and [OK] key.
- d) Delete the channel by press [OK] key.

Skip and rename

Follow the same way you can set the channel's Skip or give the new name for high light channel.



Find

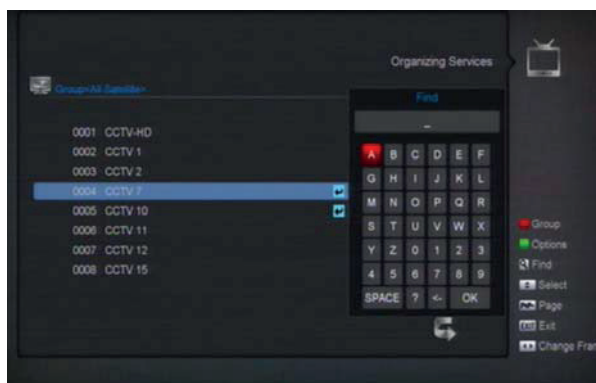


1. Press [Find] key can open the "Find" window like above. You can press [Up/Down/Left/Right]

- key to move highlight and press [OK] key to input the selected symbol or letter into the dialogue.
- After input each character, the program list on the left will search the channel according your input, and list the matched channel.
 - Move highlight to "OK" and press [OK] key can close "Find" window and you can select channel from the channels list directly.

9.2 Organizing Favourites

 This menu is helpful in adding and deleting services to and from the favorite group.

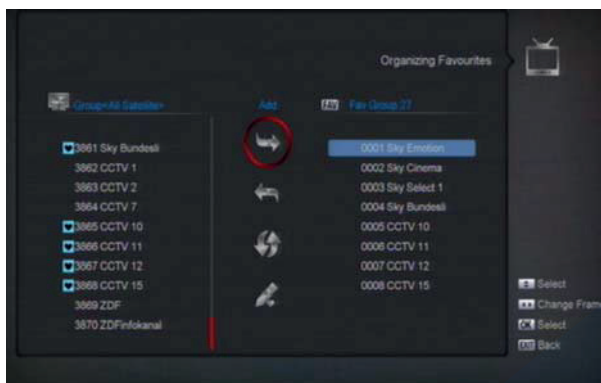

1 FAV List

Choose the FAV List by pressing "FAV" button.

2 Add

To add services into favorites, Mark the desired services by press "OK" button in Service List, press ► to choose Add mode and press "OK" button.

3 Remove

To remove services from favorites, Mark the desired services by press "OK" button in Favorite List, press ◀ to choose Remove mode and press "OK" button.

4 Move

You can reorder and move the service to the preferred position in Favorite List.

 
5 Rename

Select the desired FAV List by press "FAV" button using ◀, ► buttons to choose Rename mode and press "OK" button to display keyboard, and rename it.

6 Group, Options and Find functions

Please refer to the "Organizing Services" part in this manual.

10. Installation

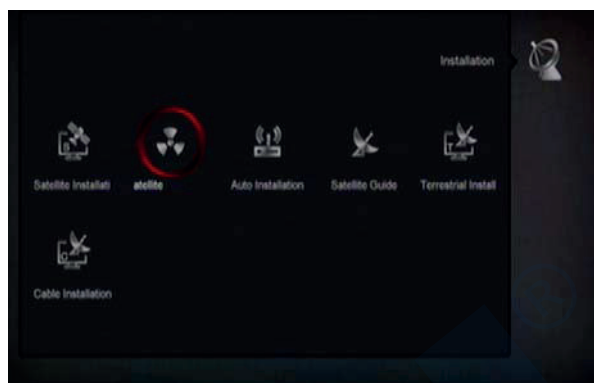

- Press [Left/Right] key to select menu pages among Service, Installation, Preference, System, Conditional Access, Internet, USB and Game.
- Press [OK] key to enter the "Installation". If Menu Lock is "On", it will display a dialogue for user to key in password. The default Password is "0000".
- Press [Up/ down] key to select menu items. Press [menu] key to go back to main menu.

10.1 Satellite Installation

Satellite

- Satellite: Press [OK] key to enter the Satellite list.



- Press [Up/ down] key to select satellite. Press [Page] key to page up or page down.

LNB Type

In this item, press [Left/Right] key can switch among "Standard", "User" and "Universal", "Unicable" mode.



DiSEqC

DiSEqC: You can use [Left/Right] key to switch options.

There are several options for your selection:

- Disable: without DiSEqC.
- 1/2, 2/2: two ports DiSEqC
- 1/4, 2/4, 3/4, 4/4: 4 ports DiSEqC
- 1/8, 2/8... 8/8: 8 ports DiSEqC
- 1/16, 2/16....16/16: 16 ports DiSEqC



Positioner

Positioner: In the "Positioner" item, you can press [Left/Right] key to switch "Off / DiSEqC 1.2 / USALS" functions.

22K

You can use [Left/Right] key to switch "ON / off". When this item is switched to "ON", receiver will receive TV and radio input signal from 22K port. If the item is switched to "Off", the receiver will receive all signals from OK port.

! Notice

When you choose LNB type "Universal", you cannot modify 22K.

0/12V

You can use [Left/ Right]key to switch "on /off".

Polarity

In "Polarity" item, [Left/Right] key to switch "Auto / H / V" functions.

Toneburst

In "Toneburst" item, you can press [Left/Right] key to switch "Off/On" functions.

LNB Power

In "LNB POWER" item, you can press [Left/Right] key to switch:" On/Off" functions.

TP Edit

When you enter to "TP Edit" menu, there will display the screen like below:



- In "Satellite" item, press [Left/Right] key to switch satellite that you want to scan or press [OK] key to enter satellite list for selection.
- In "TP Index" item, you not only can use [Left/Right] key to select transponder but also can use [Add] and [Delete] functions.
- When you press [Green] key, it will display "New TP" in "TP Index" item; you should set the parameters of "TP Frequency" and "Symbol Rate" for this new transponder. The parameters of "TP Frequency" and "Symbol Rate" can set by number keys. The available range are "3000~13450 MHz" and "1000~45000Ks/s".
- When you press [Yellow] key, there will show up a warning message for reminding whether you will delete the current transponder or not. If you select "Yes", the current transponder will be deleted, and the total account of transponder will reduce 1 correspondingly.
- When you press [Blue] key, there will show up a

warning message for reminding whether you will delete all transponders or not. If you select “OK”, all transponders will be deleted.

6. For the existed transponder, you also can use number keys to modify the parameters of “TP Frequency” and “Symbol Rate”.
7. When you complete your modification, Press [Red] key, it will show up a dialog to ask you scan mode, program type, scan type and NIT Search on/off. After you set up, press [OK] key to start scanning.
8. In the “TP Scan” item, press [Exit] key to exit the scanning and save the current parameters.

Single Scan

1. Press [Red] key, it will show up a dialog to ask you scan mode (means you want to scan all channels or only scan free channels), program type (means you want to scan all channels or only scan TV/Radio channels), scan type (means preset scan, that is searching the existed TP. Automatic Scan means blind scan. It is no need existed TP info) and NIT Search on/off. After you set up, press [OK] key to start scanning.
2. Press [White] key into the blind scanning immediately.

TP Scan

Press [Green] key to scan current TP’s programs.

Auto DiSEqC

Press [Blue] key to run Auto DiSEqC function, it can find the satellite connect to which port automatically.

Blind Scan

 
Press [White] key can directly into blind scan mode to scan the current satellite.

10.2 FastScan Satellite

In this menu, you can search the channels fast by select the provider and press OK button on Start Search item.




10.3 Auto installation

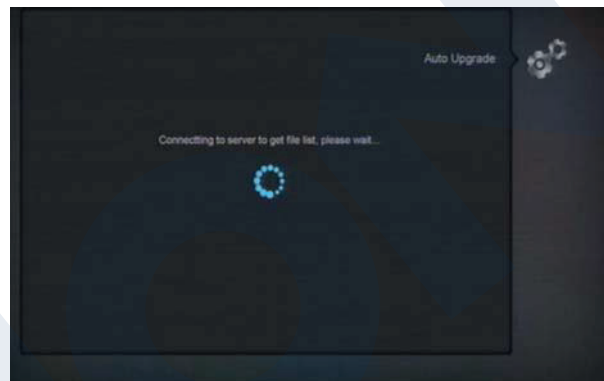

“Auto Installation” is a very new and convenient function. It will automatically detect all dishes connecting to this machine and scan the available services belonging to the satellite matched according to satellites and transponders data in current database. You don’t have to input any parameter of your antenna settings. Just press “OK” button to enter this “Auto Installation” menu then it starts scanning and shows you the result at the end of scanning.

10.4 Satellite Guide

 When you enter to “Satellite Guide” menu, you will see the screen like below:

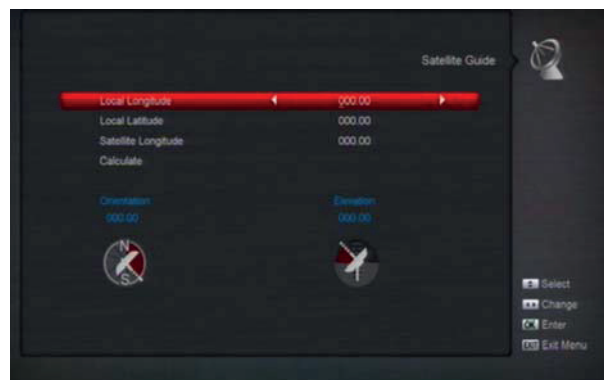

“Satellite Guide” is use for user to enter local longitude; local latitude and satellite longitude. By the evaluation

from the receiver evaluate the antenna azimuth and antenna elevation; user can follow this guidance to adjust antenna.

- 1 You can use number keys to input parameters in "Local Longitude", "Local Latitude" and "Satellite Longitude".
- 2 You can use [Left/Right] key to select east or west in "Local Longitude" and "Satellite Longitude", select north and south in "Local Latitude".
- 3 Moving highlight to "Start" item and press [OK] key. The lower column on the screen will calculate the corresponding value automatically.
- 4 Orientation means the angle between south and satellite.
- 5 Press [Exit] key to draw back to "Main" Menu.

10.5 Terrestrial Installation

Press [OK] key to enter the selected item.



- 1 You can select the Bandwidth according different country.
- 2 You can set the Tuner Power ON/OFF.
- 3 Press [Red] key can directly into blind scan mode to scan the current programs.
- 4 Press [Green] key to enter the following menu.



Scan Mode.

- 1 There are two modes. You can scan channel by channel or by frequency".
- 2 When scan band is UHF and region is "France", the range of Ch No. is from 21 to 69. When scan
- 3 Band is VHF and region is "France", the range of Ch No. is from 1 to 9. (it's according to region)
- 4 Press [Red] key to enter blind scan menu, or press [Green] key to enter TP scan menu.
- 5 Press [Exit] key to exit the scanning.

10.6 Cable Installation

 
Press [OK] key to enter the selected item.



- 1 You can select the Scan Mode, Manual Scan or Blind Scan.
- 2 You can input the Frequency by use the numeric button of the RCU.
- 3 You can input the Second Frequency by use the numeric button of the RCU, if you set the Scan Mode to Blind Scan.
- 4 You can input the Symbol Rate by use the numeric button of the RCU.
- 5 You can select the QAM value among 16QAM, 32QAM, 64QAM, 128QAM and 256QAM.
- 6 You can turn ON or OFF the NIT Search, if you set the Scan Mode to Manual Scan.
- 7 When you complete your modification, press OK button on Search item to enter Scan menu and then.
- 8 Press OK button, it will begin to scan.

11. System

When you enter to "System" menu, you will see a screen like below:

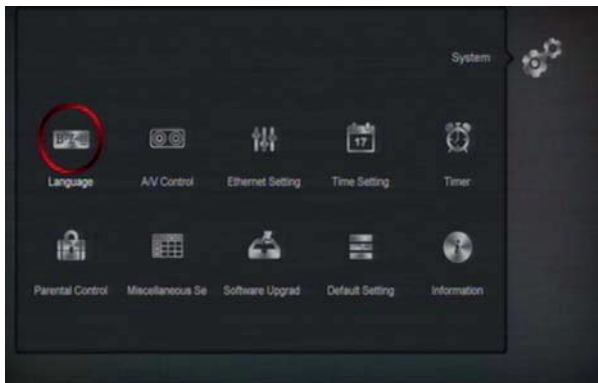

In "System" menu:

- Press [Left/Right] key to select menu items among Language, A/V Control, Ethernet setting, Time setting, Parental Control, Miscellaneous Setting, Timer, Software Upgrade, Default setting, Information
- Press [OK] key to enter the selected item.

11.1 Language

When you enter to "Language" menu, you will see the screen like below:



- 1 Language: press [Left/Right] key to select menu languages, the selections of languages include: French, English, Spanish, Russian, German, Greek, Italian, Portuguese, Arabic, and Polish. Etc...
- 2 First Audio: Some channels have more than one audio language for choosing; by this function you can set the first audio for this channel. If the playing channel has the same audio as the "First Audio" you set, system will play this audio language as default. If the channel hasn't the suited audio language, then the system will compare automatically with second audio language. The selections of audio languages include: English, French, German, Russian,

Arabic, Portuguese, Turkish, Spanish, Polish and Italian.

- 3 Second Audio: If the channel has no corresponded audio with "First Audio" but have corresponded audio with "Second Audio", system will play the second audio language as default. If no audio language corresponds with the "Second Audio", then the default language of current channel will be played automatically. The selection of audio languages include: English, French, German, Russian, Arabic, Portuguese, Turkish, Spanish, Polish and Italian.
- 4 Audio Priority: Press [Left/Right] key to select Dolby or Language.
- 5 EPG: Press [Left/Right] key can select EPG language.
- 6 Subtitle Language: Press [Left/Right] key can select subtitle language.
- 7 Teletext: You can set teletext language. If the streams have this language you can see the teletext in language you set.
- 8 Press [Menu] key to draw back from "Language" menu.

11.2 A/V Control

When you enter to "TV System" menu, you will see the screen like below:



- ✧ Display Mode is for switching the system outputting video resolution. Move highlight on it and press left or right key, it will switch video resolution circularly by the sequence "AUTO", "By Native TV", "480p", "576P", "720P_50", "720P_60", "1080i_50", "1080i_60", "1080P_50" and "1080P_60". This effect is equal to press P/N Key under Full Screen and their last setting saving will be efficient for each others. By

Source means system will set the video output resolution according to the program it's playing, different resolution programs switching perhaps will makes TV screen flickering. By Native TV means system will be according to the HDMI TV's max supported resolution to set its resolution, if system is not connected to a HDMI TV, it will set resolution to be default

- ✧ Aspect Mode is for switching the screen aspect ratio mode. Now we provide below options: 4:3 PS / 4:3 LB / 16:9/Auto. You can press [Left/Right] key to select each mode circularly. 16:9 will provide user pillar box mode it means user use 16:9 TV to display but need to see a 4:3 full display picture. System will force press wide screen picture to be narrow and there're black band on left and right site. Auto means system won't do any aspect ratio translation, 16:9 picture source will be good display on a 16:9 TV but will be too narrow on a 4:3 TV, and 4:3 picture source will be too wide in a 16:9 TV but will be good display in a 4:3 TV.

- ✧ Digital Audio Out is for setting the both SPDIF and HDMI's digital audio output mode, it has options LPCM Out, Auto, You can press [Left/Right] Key to select each modes circularly. LPCM Out means system will decode no matter AC3 or PCM audio track data to be LPCM, digital audio decoder or HDMI TV will get LPCM digital audio data. Auto means system will detect which the connected HDMI TV can decode and then output that data. If HDMI TV can decode AC3, system just output RAW data, if HDMI TV can decode LPCM only; system will just decode AC3 or LPCM to be LPCM and then output.

- ✧ Brightness/Contrast/ Saturation: You can adjust the parameter about the Video image by using the [OK] button or press [Volume Up/Volume Down] key; the default value is Level 10...

- ✧ OSD Transparency: Besides the setting of "OSD Menu Style", you also can set the transparency of OSD. You can press [Left/Right] key to select the values. There are 5 levels of transparency, 10%, 20%, 30%, and 40% and "NO" (means no transparency function).

- ✧ Press [Menu] key to draw back from "TV System" menu.

 
11.3 Ethernet Setting

- 1 Select your Network Type as Wired , Wireless or 3G Dongle , if you select Wireless, can configuring Wi-Fi (wireless) as the following step:

- a) Select Wireless on Default Network Type item.




- b) Press [red] button the wireless LAN network list will appear, Select you Wi-Fi network and press [ok] button, at last input password.

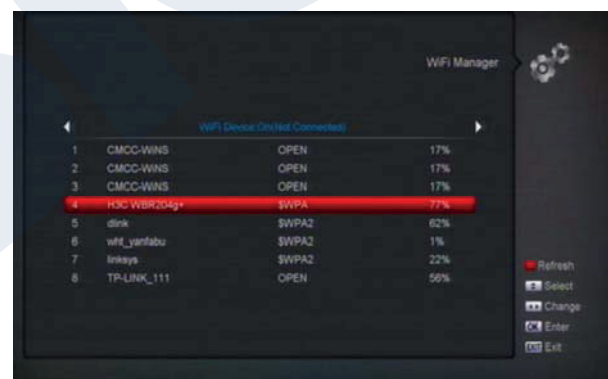

- c) Press [OK] button on Connect item to start connecting.

 
- 2 This menu you may assign a dynamic IP address to the digital receiver. To do so, select the DHCP On.
- 3 If you have a static IP address, unselect the DHCP Enable, then the IP Address, Subnet Mask, Gateway and DNS options become enabled. You have to set these options according to your IP address.
- 4 WiFi Manager
Insert WiFi equipment first, then search available
Enter net signal, input the password to connect with network.
- 5 3G Network
 - a) When you inset the 3G dongle, the screen will display a message like “3G Device plug in “after 14 seconds and will auto connect 3G Network. you will see picture like the below

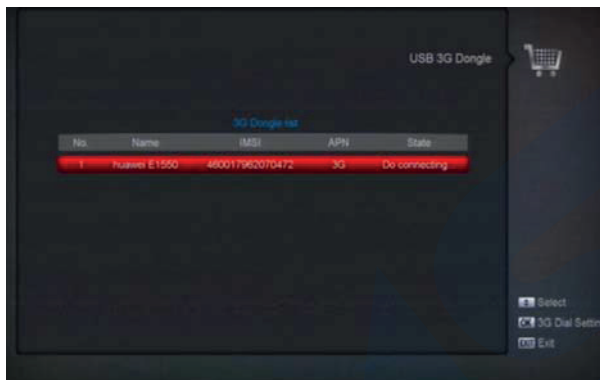

- b) In this menu, you can press [OK] key select 3G Dial setting, Press [OK] key to select connect to network or disconnect the network

11.4 Time Setting

 When you enter to “Local Time Setting” menu, you will see the screen like below:

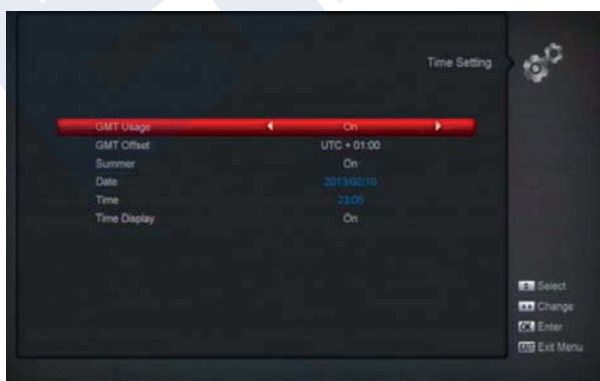


- ✧ GMT Usage: This item is use for open the usage of GMT. You can press [Left/Right] keys to switch “On/Off”.
- ✧ The “GMT Offset” item is valid only when the setting of “GMT Usage” is “Yes”. You can press [Left/Right] keys to switch “GMT Offset” value and the range are “-12:00 ~ +12:00” increase each half hour progressively.
- ✧ You can press [Left/Right] to control Summer time on or off.
- ✧ “Date” and “Time” items are valid only when the setting of “GMT Usage” is “No”. You can press [Left/Right] keys to moving highlight and use number keys to input directly.
If the current channel provides the correct time information, you will see the current time while you enter “Time” menu. If the channel doesn’t provide time information, you have to input the date and time information manually.
- ✧ Press [Menu] key to draw back from “Local Time Setting” Menu.

11.5 Timer

Press [OK] key to open timer menu.

 - ✧ Current time information will display on the first column; if the current time is incorrect, please modify the time information in “Time” item.
- ✧ Timer Number: You can press [Left/Right] keys to set Timer number, and there are 8 timers in total.
- ✧ Timer Mode: There are several modes for Timer to setting, include Off, Once, Daily, Weekly, Monthly and Yearly.
- ✧ Timer Service: There are two options for “Timer Service”, include “TV Channel” and “Radio Channel” (timer setting for channel change and Wakeup/Sleep) and Message (reminding message).
- ✧ When you select “Channel” (timer setting for channel change and Wakeup/Sleep) option in “Timer Service”, the screen will display like below:

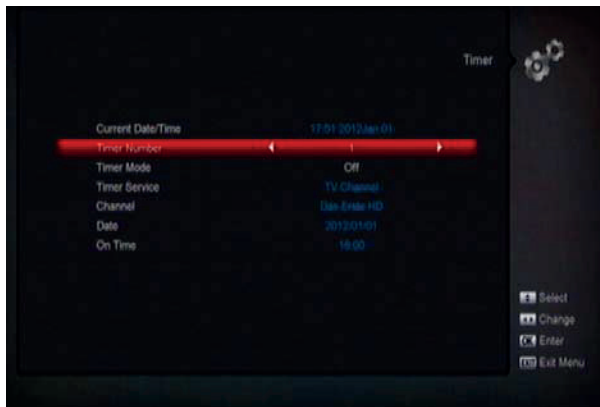

- i. Channel: press [OK] key to enter channel list and select channel that you want to setting.
- ii. Date: use number keys to input your wakeup date.
- iii. On Time: use number keys to input your wakeup time. Once the time's up, no matter what the system is in standby mode or in playing mode, the system will automatically switch to the channel you want and start to play.
- ✧ When you select "Message" (reminding message) option in "Timer Service", the screen will display like below:

 


- iv. Wakeup Message: press [Left/Right] key to select reminding message as Birthday, Anniversary and General.
- v. Date, you can use number key to input your wakeup date.
- vi. On Time: use number keys to input your wakeup time. Once the time's up, no matter what the system is in standby mode or in playing mode, the system will automatically pop a reminding message.
- vii. The message will always display on the screen, you can press [Exit] key to close it.
- viii. Press [MENU] key to exit the current menu.

11.6 Parental Control

You can set a password for anyone who wishes to operate in the "Installation" menu. And you can also set the password for the lock channels. (How to set the lock channel please refer to LOCK) Here will show you how to setting and how to revising the password.

- 1 In "Parental Lock" function, press [OK] key, there will pop a dialogue for you to input the password. When you input the correct password, you will see a screen like below:

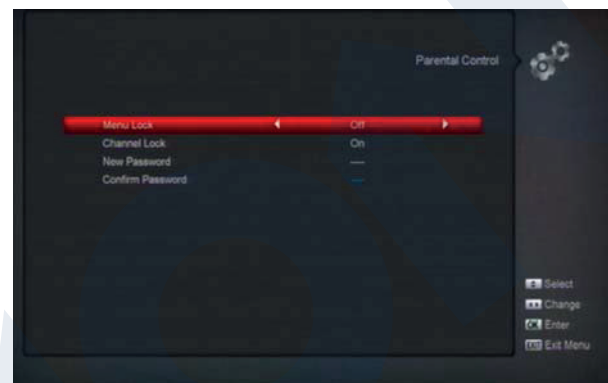

- 2 Menu Lock determining that when user wishes to enter "Installation" menu, whether have to input Password or not. If the setting of "Menu Lock" is "On" which means user have to key in password, set "Off" means unlock.
- 3 Channel Lock determining that when user wishes to play the lock channels, whether have to input the password or not. If the setting is "On", play the channels with lock mark will show up a dialogue on the screen and ask for the password. If the setting of "Channel Lock" is "Off", the Lock function will invalid.
- 4 New Password is used for revising password; you can input the new password in this item by using number keys directly. After you filled in 4 digital numbers, the highlight will auto skip to Confirm Password and ask you to input the new password again. If the password is correct, the screen will show up a message of "Saving Data, Please Wait..." After finish saving and drawback to "System Setup" menu, the revising is complete.
- 5 Press [Menu] key to draw back from the "Parental Lock" menu.

 
11.7 Miscellaneous Settings

When you enter to “Miscellaneous Settings” menu, you will see a screen like below:




- 1 Subtitle Auto: You can press [Left/Right] key to select “On” or “Off”. If the current channel has subtitle information, it will be showed up automatically while this function is “ON”, if this function is “OFF”, you need turn on the subtitle manually by press [Yellow] key.
- 2 Auto Power Down: You can press [Left/Right] key to select the time or “Off”, if you select time, duration this time if no any operation on receiver, it will go to standby mode.
- 3 Standby mode: if set to “Real”, Press power key receiver will be in real standby status, the consumption will be less than 0.5 Watt. If it's set to “Fake”, Press power key, receiver will be in fake standby status.
- 4 OSD Timeout: When you switch channels in full screen, there will show up some information about current channel on the lower of the screen. And regarding to the duration of these information show up on the screen, you can press [OK] and [up/ down] key to set the time. The range of the duration is “1 second ~ 10 seconds” .
- 5 OSD Position: control display position of the info bar in full screen mode. You can choose “bottom” or “top”.

11.8 Software Upgrade

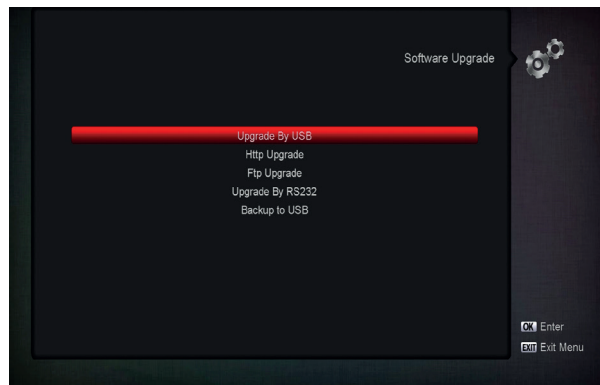

11.8.1 Upgrade By USB

 In this menu you can upgrade the software from USB conveniently, Press “Left/Right” button select USB A or USB B; press ' OK ' button to enter.

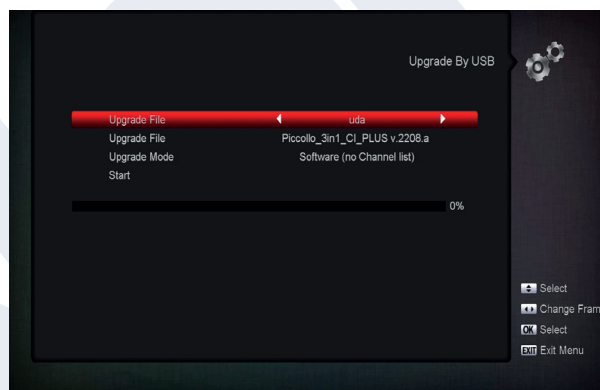


In this menu you can select the Upgrade Mode among Software(No channel list), Channel list, All SW+bootloader and All SW+Channel list, and you can select the appropriate upgrade file on "Upgrade File" item. After you select the "Upgrade Mode" and "Upgrade File", press ' OK ' button on "Start" item, the receiver can upgrade automatically.

Note:

You must put the upgrade file on the /ROOT DIRECTORY of the USB storage.

 11.8.2 Http Upgrade

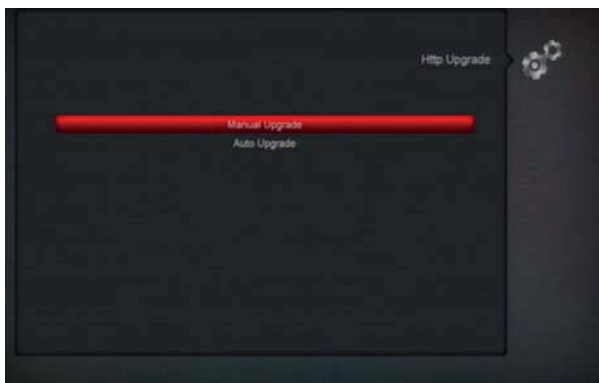


When connected to the Internet, receiver can manually or automatically make software update from file from server.

Note:

This function depends on connection with external server. In case of no software on server, this function will not work.

 11.8.3 Ftp Upgrade

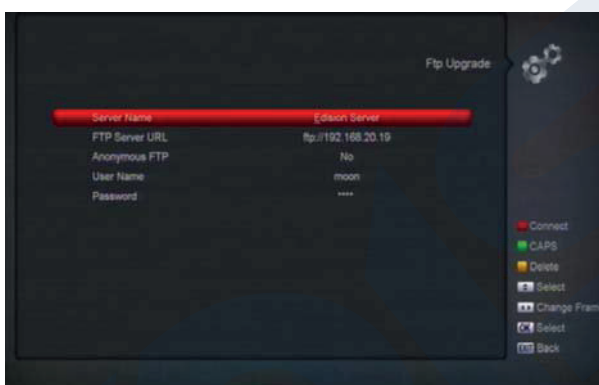


When connected to the Internet, receiver can make software update from file from FTP server.

Note:


This function depends on connection with external server. In case of no software on server, this function will not work.

 11.8.4 Upgrade by RS232:

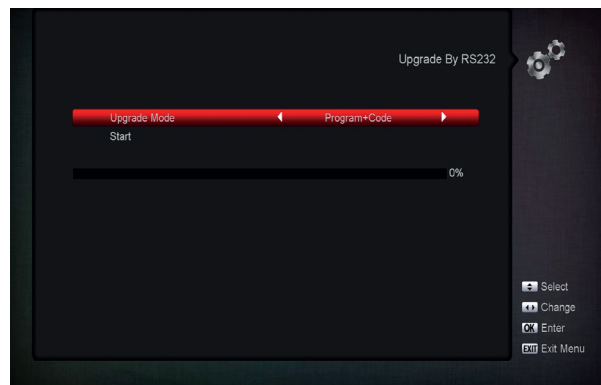

1. We offer the functions for user to connecting receiver (Master) to the other receiver (Slave) via serial interface. Connect master receiver to slave receiver via serial interface. Enter "Software Upgrade" menu in master receiver and press[Left/Right] keys to switch upgrade mode: All SW+bootloader /All SW+Channel list/Software(no channel list)/Channel list.
2. Moving highlight to "Start" on master receiver and press[OK] key to start upgrade.
3. Turn on slave receiver and it needn't operate any setting.
4. Press [Exit] key to draw back.

 11.8.5 Backup to USB

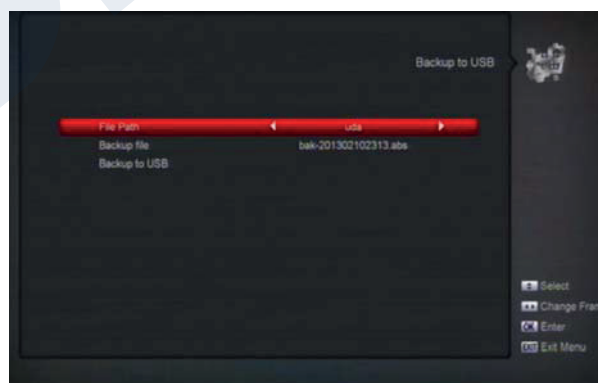

In this menu ,you can dump the software to the USB equipment

1. In "Backup file",you can press [OK] key to edit the file name.; Press "Left/Right" button select USB A or USB B;
2. In "Backup to USB", you can press [OK] to start backup software .

11.8.6 Upgrade By Satellite:



This function can upgrade the software through signal lines from the satellite

- 1 Select the satellite and TP or input the TP value and download PID, these parameters you can get from your provider.
- 2 Then move the highlight to the start button and press [OK] button to start upgrade.

 
a) Upgrade By Satellite:



This function can upgrade the software through signal lines from the satellite

- 1 Select the satellite and TP or input the TP value and download PID, these parameters you can get from your provider.
- 2 Then move the highlight to the start button and press [OK] button to start upgrade.

b) Upgrade By Terrestrial:

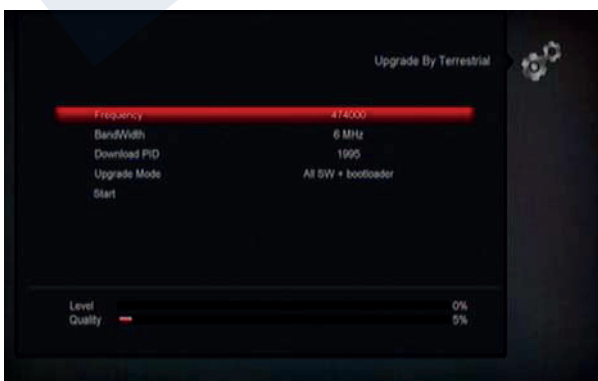

This function can upgrade the software through signal lines from the Terrestrial

- 1 Select or input the Frequency, Bandwidth and download PID, these parameters you can get from your provider.
- 2 Then move the highlight to the start button and press [OK] button to start upgrade.

 
c) Upgrade by Cable

This function can upgrade the software through Signal lines from the cable.




- 1 Input the frequency, symbol rate value and download PID, and select scan mode.
- 2 Then move the highlight to the start button and
- 3 Press [OK] key to begin to upgrade.

11.9 Default Setting

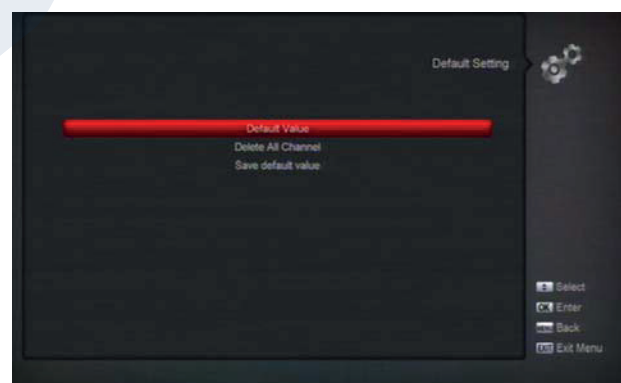

 
11.9.1 Default Value:

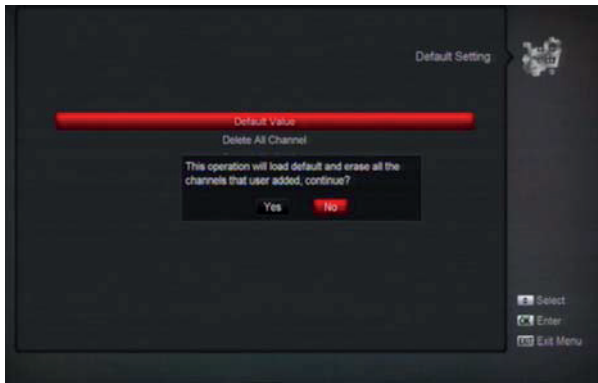

When you press [OK] key in the “Default Setting” item:


- 1 There will pop a dialogue for you to enter the password, and the default password is “0000”.
- 2 After you input the correct password, there will show a warning message to inquiry you “The operation will load default and erase all the channels that user added, continue?”.
- 3 If you select “OK” option, the all revised parameters of the receiver will reset to default value. Please carefully to using this function.
- 4 In step 1 and step 2, press[Exit]key can draw back from this item and without saving.

 11.9.2 Delete All Channel:

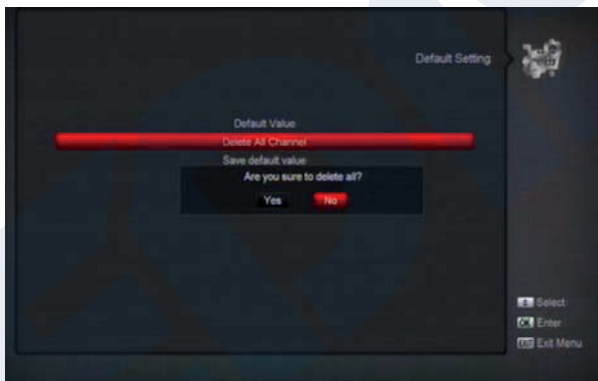

When you press [OK] key in the “Delete All Channel” item, it will pop a dialogue ask you whether confirm to delete all channel. If you select “OK”, the entire channel will be deleted.

 11.9.3 Save default value

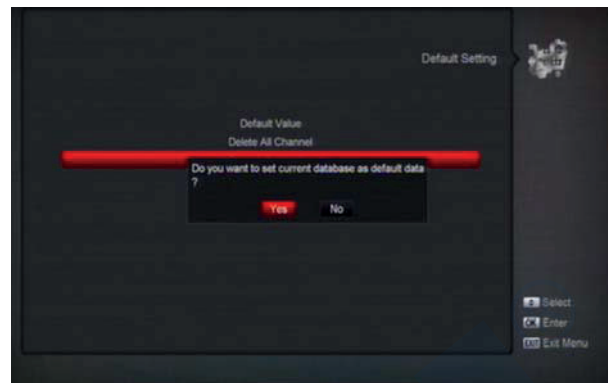

When you press [OK] key in the “Save default value” item, there will show a message to inquiry you “Do you want to set current database as default data?”. If you select “OK” option, it will to set current data as default data

 
11.10 Information



- 1 When you enter to “Information” menu, you will see a screen like above. The screen displays :MODEL ID,S/W VERSION,H/W VERSION,LOADER VERSION,LATEST UPDATE,STB SN,STB ID,VFD Version.
- 2 Press [Menu] key to draw back to “System” menu.

12. Conditional Access

12.1 CA Setting

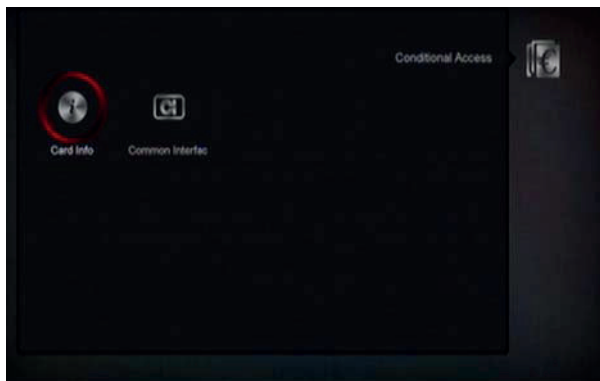

We provide one CA slots for user to use. Receiver has build in smart card module with CONAX system. By using cards in this system provided by operators, it is possible to watch many scrambled channels coded in this system. This menu shows detailed information about cord inserted into cord reader module. It allows inserted according to help messages visible on the bottom of the screen.

 


Note:

All information showed in this menu and submenus are coming from inserted card. In case if anything is wrong, it could be card problem. After inserting the card correctly at any time, a message-box will show on the screen with message about detecting the card, in "card info" menu all available information will be displayed. You can press [left/right] key to set the message display time

12.2 COMMON INTERFACE

We provide two CI slots (option, some model only has one slot) for user to use. Using different CAM & cards provided by different CAS operator, user can view many type or scrambled channels.

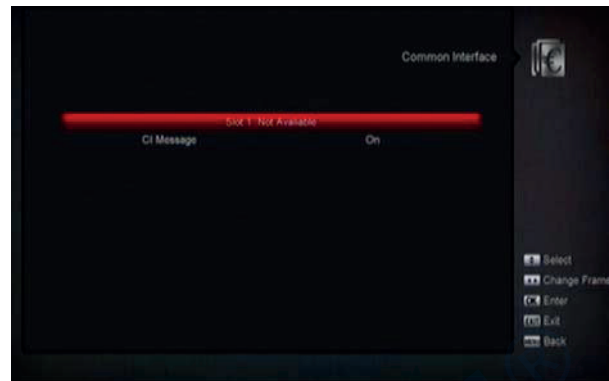

We provide this menu to display the detail information of the CAM & cards inserted in the slots. User can check all this information according to the help message at the bottom of each menu.

Note:

All information showed in this menu and submenu is abstract from CAM & card. In case something is wrong, it may be the problem of CAM or card.

When you insert the CAM correctly at any time, a message will show in the screen to tell you that which CAM has been detected by the receiver and is available now.

CI Message

 
It is used to turn on or turn off the CI info display function by using ◀, ▶ buttons or "OK" button to select.

ON: To display the CI info.

OFF: Don't display the CI info.

13. Application


If you enter to the "Application" Menu, you will see the picture like the below:

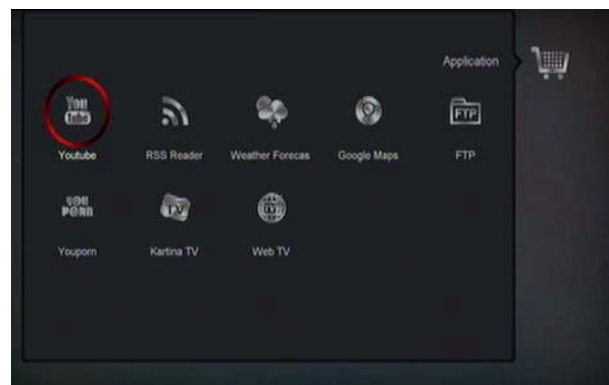

13.1 YouTube


This menu is some internet applications. "YouTube" can

 play stream media from "www.youtube.com". When you enter this menu, you will see a screen like below:

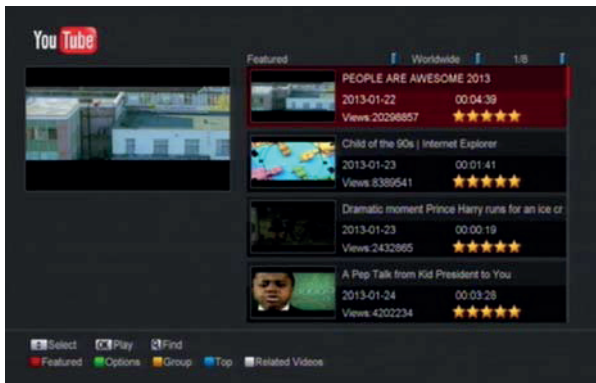

- 1 Press [up/down] key to move highlight.
- 2 Press [OK] key on one item, it will play pertinent video. The video will show on top left corner. Press [OK] again, it only shows video in the centre of your screen. Now press [zoom] key, the video will play in full screen.
- 3 Press [Left/Right] to control volume.
- 4 Press [pause] key to pause video, or press [stop] key to stop play.
- 5 Press [red] key to display the featured video.
- 6 Press [green] key to sort by site and duration. The site has Germany, worldwide, Poland and so on. Duration has all time, this week, and this month and so on.
- 7 Press [yellow] key to switch group. These are game, news, tech, movie and so on.
- 8 Press FIND [F] key in full screen to open the "Find" window. You can press [←,→,↑,↓] keys to move highlight and press [ENTER]key to input the letters. Then press [red] key to find.

 13.2 RSS Reader

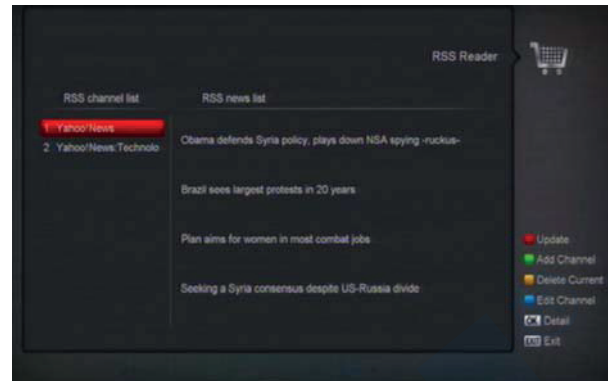


In this menu you can see the news

● Red key

To update the news to the newest.

● Green key

 To add new channels, you can input a new website. Use this menu. You can add 10 channels at most.

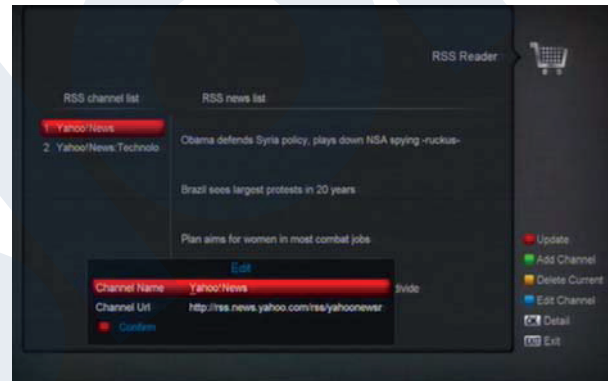


● Yellow key


To delete current channel.

● Blue key


 
To edit current channel information, you can edit channel name and channel URL.

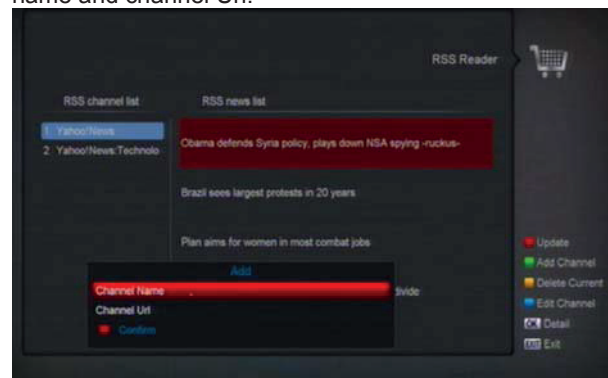

 Press ok button to see the detail information like the below.

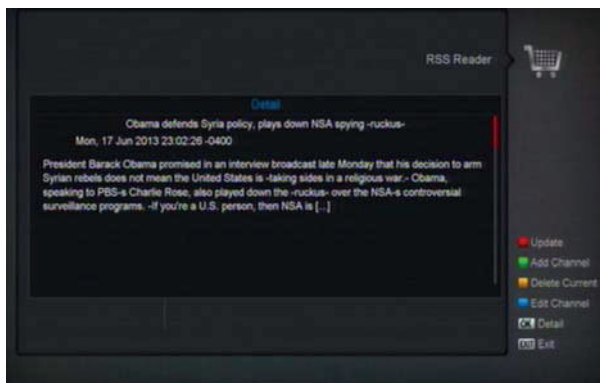

  13.3 Weather Forecast

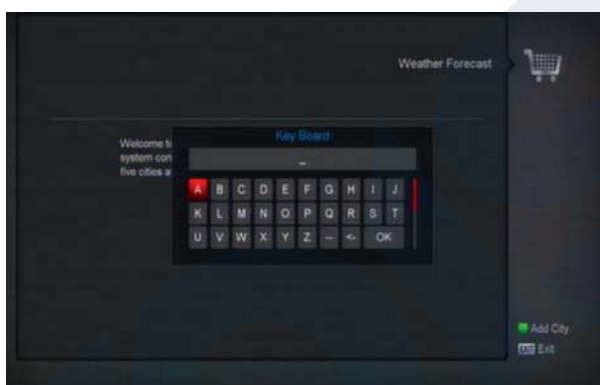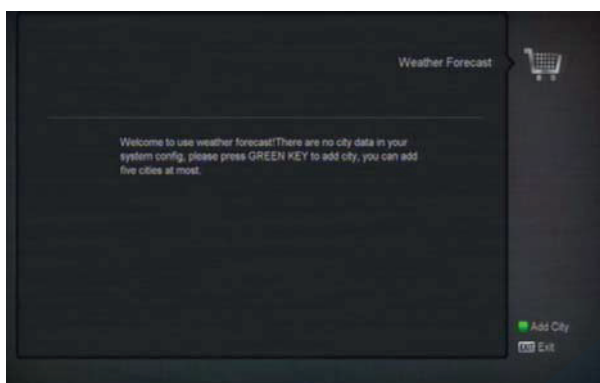

In this menu you can see the weather forecast, press [Green] key to add city.



- **Red key**
To update the weather forecast to the newest.
- **Green key**

 
To add new city, use this menu, you can add 5 cities at most.

- **Yellow key**
To delete current city.

- **Blue key**
To switch other temperature mode.


13.4 Google Maps

Inside the menu can browse Google Maps

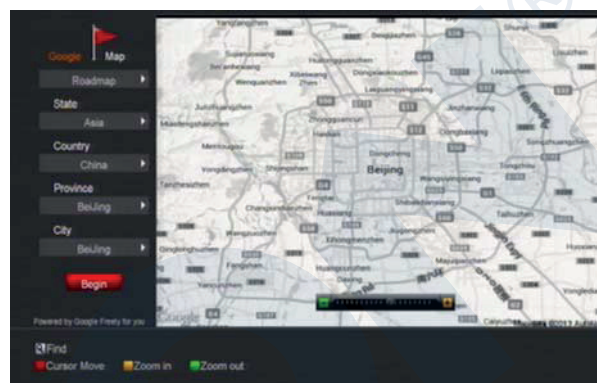

1. Select left toolbar menu to change different cities and map mode, move the highlight to the "Begin" option and press [OK] button start to view the map.
2. Find box at the bottom left enter city name find cities;
3. Press [red] key to move the cursor;
4. Press [yellow] key to zoom in map;
5. Press [green] key to zoom out map;

 13.5 FTP

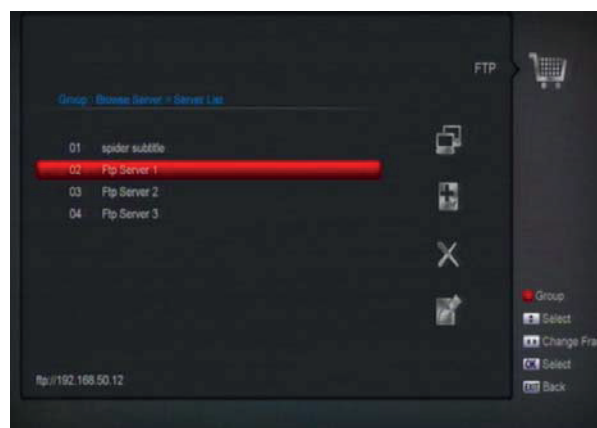


When connected to the Internet, receiver can download some files from FTP server.

Note:

This function depends on connection with external server. In case of no any files on server, this function will not work.

13.6 Web TV

 When you enter to “Web TV” menu, you will see a screen like below:

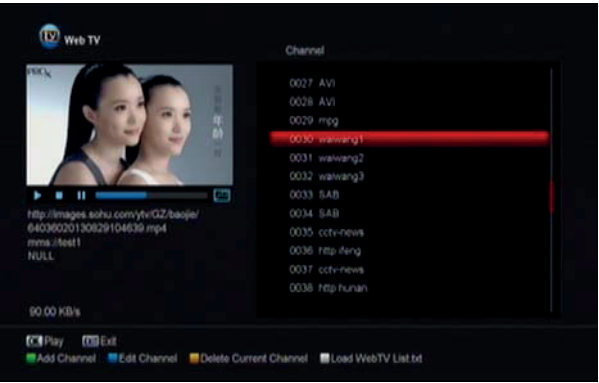


- 1 In this menu you can select your favorite channel to view, press [OK] key play in full screen, you can press [up / down] key to change channels, and press [left / right] key or [volume + / -] key to adjust volume level.
- 2 Press [green] key to add channel URL;
- 3 Press [blue] key to edit channel URL;
- 4 Press [yellow] key to delete channel URL.
- 5 If you get the “WebTV List.txt” file, you can add more channels and press [white] key to update


13.7 DLNA

You can use this function to show Android device Video/Music/Photo on TV.

 
- 1 Install the BubbleUPnP player app on Android device.

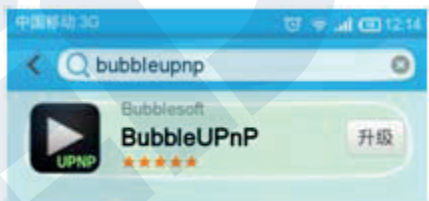

 
- 2 Connect receiver and Android device to the same network
- 3 Connect DLNA in receiver
Application/DLNA/DMR menu like below

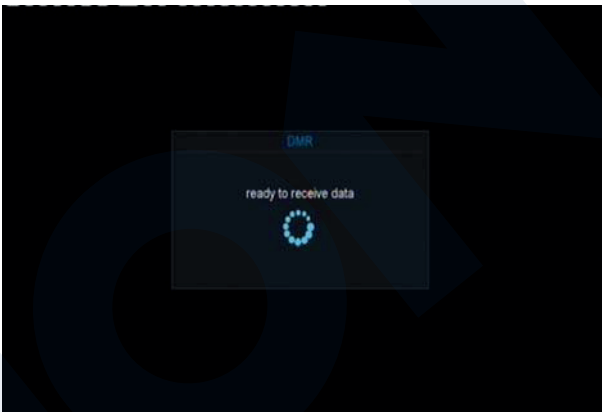

 
- 4 Run BubbleUPnP player on Android device to scan the Render and select Ali Media Render like below

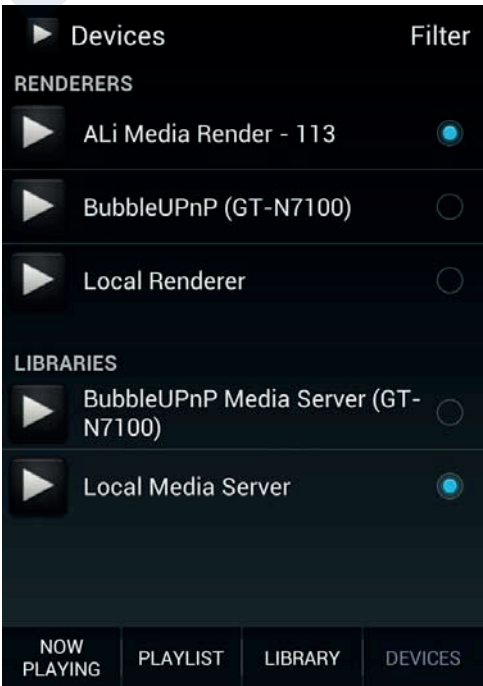

 - 5 Enter LIBRARY to choose the media files from Android device show on TV, like Video/Music/Photo

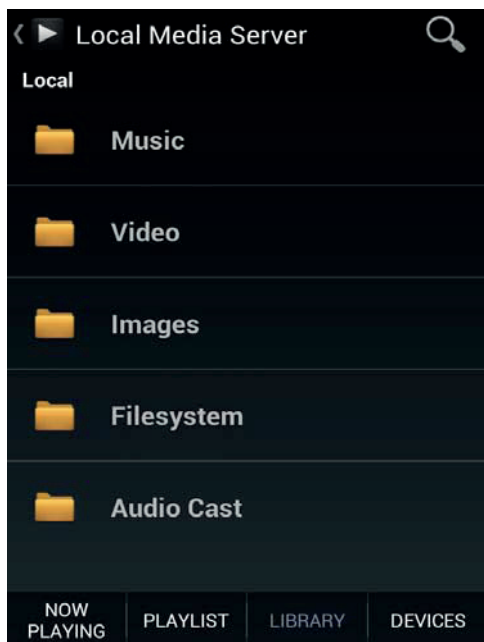

 - 3 Connect receiver and Android device to the same network
- 4 Scan channels and enable the Big2Small server on receiver in Application/Big2Small/Big2Small server menu

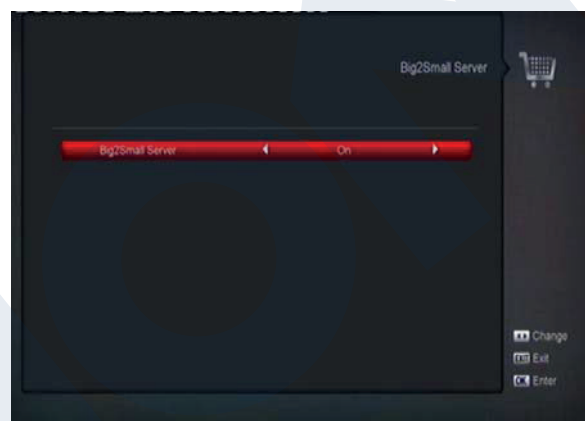


13.8 Big2small

With this function you can watch the TV channels on android device from receiver, please set the receiver and android device like below:

- 1 Install the Big2Small app on android device
Download the android client APP:Big2Small
Version:1.2.1 in Google play app store
<https://play.google.com/store> freely



 - 5 Please remain to the secondary menu on receiver
- 6 Run Big2Small app on Android device and scan the Big2Small Server in network

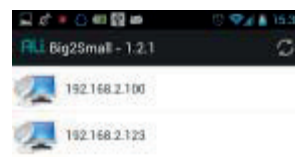

- 2 Download the app named "MX Player" in any app store and install it on Android device.



- 7 Select a Big2Small Server , get the channel list from server:



 
8 Choose a channel to play



Note: before you watch the channel on android device please enter to the secondary menu on receiver, means receiver can not go to playing state. otherwise the server will be unavailable.

Note: B2S support TV & Android device to watch program of same TP concurrently

14. Game

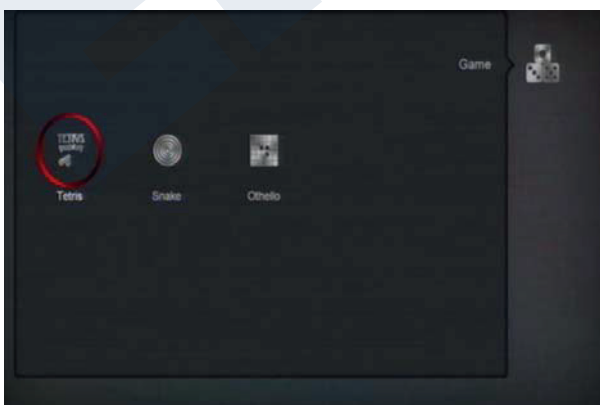

When you enter "Game" menu, you will see three Games include Tetris, Snake and Othello.

Basic operation statement:

14.1 Tetris

- Moving highlight to "Setup" and press [Left/Right] key to select the game level (speed).
- Moving highlight to "Start" and press [OK] key to start the game.
- Moving highlight to [Cancel] keys and press [OK] key to draw back from the game.
- Start on the game:
 - [Left/Right]] Move shape left or right
 - "Channel Up" Rotate clockwise
 - "Channel Down" Faster drop
 - [OK] Pause/Play the game
 - [Exit] Quit game and drawback to "Game" menu.

14.2 Snake

- Moving highlight to "Setup" and press [Left/Right]] Key to select the game level (speed).
- Moving highlight to "Start" and press [OK] key to start the game.
- Moving highlight to [Cancel] keys and Press [OK] key to draw back from the game.
- Start on the game:
 - [Left/Right/UP/Down] use these arrow keys to guide the snake.
 - [OK] Pause/Play game
 - [Exit] Quit game and drawback to "Game" menu.

 
14.3 Othello

- Moving highlight to "Setup" and press [Left/Right]] Keys to select the game level (degree of difficulty).
- Moving highlight to "Start" and press [OK] Key to start the game.
- Moving highlight to [Cancel] keys and Press [OK] key to draw back from the game.
- Start on the game:
 - [Left/Right]/ UP/ Down] use these arrow keys to guide chessman.
 - [OK] set chessman.
 - [Exit] Quit game and drawback to "Game" menu.

15. EPG

Press 'OK' button to this menu you can see the picture like the below, you can select EPG more and Schedule.

This Function is same as EPG.

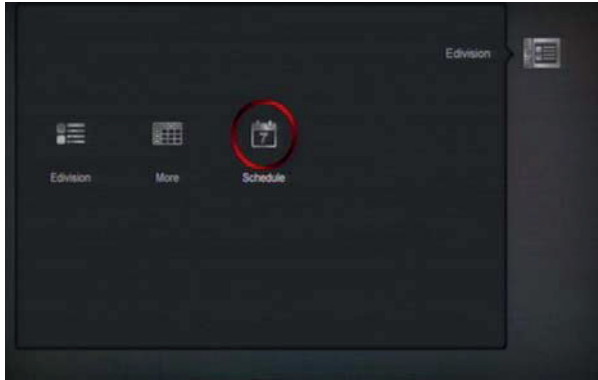

16. New Features

16.1 Equalizer

When you listen to the Radio program, it will display the music spectrum graphic on TV Screen.



17. Trouble Shooting

If you suspect there is a fault with your receiver, please check the following trouble shooting guide

Before calling authorized service agent.

Warning! Under no circumstances attempt to repair the receiver yourself. Tampering with the receiver may result in fatal electric shock and will invalidate your warranty.

Symptom	Possible cause
Settings you made in the menu have not change	The receiver lost power before being able to enter into standby mode Some of the Settings saved by user can be deleted partly or fully
No signal	The level of signal is weak LNB is out of order The cable from the LNB is incorrectly Connected (short circuit or open circuit) The position of dish is aligned incorrectly
Receiver is on but no picture or sound except the following messages (NO TV program)	Channel is not available Channel is scramble
Receiver not responding to remote control unit	RCU batteries are dead or inserted incorrectly The RCU is pointing toward wrong direction
Poor picture Quality	The level of Signal strength is low
No sound	The cable is connected incorrectly The Volume level is low Muting function is active
No display on the LED Display Panel	The power cord is not plugged in correctly.
No picture on the screen	Receiver is in Standby mode RCA Jack or cable is not connected firmly to the video output port of television Incorrect channel or video output is selected on television Brightness level of your TV set is incorrectly defined

18. Specifications

SYSTEM RESOURCES	
Main Processor	594MHz based CPU
Flash Memory	16 mbyte
DDR SDRAM	256 mbyte
Tuner/Front-end(Optional)	
Tuner Type	DVB-S / DVB-S2
Input Connector	F-type, Connector, Female
Signal Level	-65 to -25 dBm
LNB Power & Polarization	Vertical: +13V
	Horizontal: +18V
	Current: Max. 400mA
	Overload Protection
22KHz Tone	Frequency: 22±1KHz
DiSEqC Control	Amplitude: 0.6±0.2V
	Version 1.0, 1.1 1.2, USALS Available, unicable
Demodulation	QPSK, 8PSK
Input Symbol Rate	1-45 Mbps, Convolution Code Rate
Forward Error Correction (FEC)	DVB-S 1/2, 2/3, 3/4 5/6, 7/8
	DVB-S2 1/2, 3/5, 2/3, 3/4, 4/5, 5/6, 8/9, 9/10
Tuner Type	DVB-T2/T/C
Input Connector	IEC-type, Connector, Female
Frequency Range	47MHz~862MHz
Input Level	-82.0dBm and -20.0dBm
Active ANT Power	DC 5V at max 75 mA, Overload protection
Bandwidth	VHF/UHF: 6MHz, 7MHz, 8MHz
Demodulation	COFDM
Transmission mode(FFT)	1k, 2k, 4k, 8k normal and extended, 16k normal and extended, 32k normal and extended.
Constellations	QPSK, 16-QAM, 64-QAM, 256-QAM
	Both rotated and non-rotated
Guard intervals	1/4, 19/256, 1/8, 19/128, 1/16, 1/32, 1/128
Code rate	DVB-T: Viterbi + Reed Solomon 1/2, 2/3, 3/4, 5/6, 7/8.
	DVB-T2: LPDC + BCH 1/2, 3/5, 2/3, 3/4, 5/6.
Scattered Pilot Pattern	PP1, PP2, PP3, PP4, PP5, PP6, PP7, PP8
DVB-T2 Input Profiles	Input Mode A-Signal PLP, input Mode B-Multiple PLPs(Common PLP, Type 1 and 2 up to the maximum allowed figure 255)

POWER SUPPLY	
Input Voltage	Free Voltage (100~240V AC, 50/60Hz)
Power Consumption	15W MAX
MPEG TS A/V Decoding	
Transport Stream	MPEG-2, H.264
Input Rate	Max.120Mbit/s
Aspect Ratio	4:3, 16:9, Letter Box
Video Decoding	MPEG-2, MP@ML, MPEG-4 part 10/H264
Video Resolution	720*480P/I, 720*576P/I, 1280*720p, 1920*1080i, 1920*1080P
Audio Decoding	MEPG-1 layer I/II, Mpeg2 layerII, Dolby digital
Audio Mode	Left / Right / Stereo/ Mono
Sampling Rate	32, 44.1 and 48KHz
A/V & DATA INPUT/OUTPUT	
AV OUT	Audio L/R output
IR	38KHz
S/PDIF	Digital Audio or Dolby Digital Bit Stream Output
RS-232C	Transfer rate 115.2Kbps
	9 pin D-sub Type
ETHERNET(Optional)	100M
USB	Two USB 2.0 slot Compatible
HDMI	VER1.3
	Type A
PHYSICAL SPECIFICATION	
Size[B*H*T]	220mm*46mm*169mm
Net Weight	1.2KG
Operation Temperature	0°C~+45°C
Storage Temperature	-10°C~+70°C
Storage Humidity	5%~95% RH (Non-Condensing)

Specifications are subject to change without further notice.
The manufacturer does not assume any responsibility regarding any errors or mistakes in printing.
Please note that new software may change the features of the receiver.
The manufacturer holds the rights of changes without any further notice.
The image shown here is indicative only, the actual product may differ.